

Maintenance

It is important to keep the Barbie Keyboard as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Keep the Barbie Keyboard away from direct sunlight or sources of excessive heat.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the toy is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Protect your furniture when placing the unit on a natural oil or lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**.

Please also visit our website: www.toptoysonline.com.

Troubleshooting

If improper operation occurs, press the reset button located on the front of the unit.

If the toy still does not play, check the batteries. They are probably weak and need to be replaced with new batteries.

If the unit still does not work after changing the batteries, make sure you have installed them properly, with the + and - polarities matching the diagram printed inside the battery compartment.

If there is a distorted or fuzzy sound, the batteries may be weak. Replace with new batteries.

If problems persist, **do not attempt to repair the toy yourself**. See the warranty for factory service information.

"SHE WILL (BE LOVED)" Courtesy of Careers-BMG Music Publishing, Inc. (BMI)/BMG Songs Inc. (ASCAP) Under license from BMG Film & TV Music.

"OUTRAGEOUS" Courtesy of Zomba Songs Inc. (BMI), Under License from BMG Film & TV Music.

"OOPS!... I DID IT AGAIN" Courtesy of Zomba Enterprises Inc. (ASCAP) a/b/o Zomba Music Publishers Ltd. Under License from BMG Film & TV Music.

WARNING: It is a violation of Federal Copyright Law to synchronize any music from these cartridges with video tape or film, to copy any music from these cartridges onto phonorecords, or to print material from these cartridges in the form of standard music notation and/or words without the express written permission of the Copyright owners.

Limited 90 Day Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$9.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$9.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:
**Consumer Repair Department
KIDdesigns, Inc.
1330 Goodyear Dr.
El Paso, TX 79936-6420**

BARBIE and associated trademarks and trade dress are owned by, and used under license from Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

Copyright Together Again Video Productions, Inc. Kidsongs® is a trademark of Together Again Video Productions, Inc.

Manufactured and Distributed by KIDdesigns, Inc.
Rahway, NJ 07065-5024


Printed in China

BE748-062907

Model BE-748

Barbie™

 "Jam With Me"
Electronic Keyboard

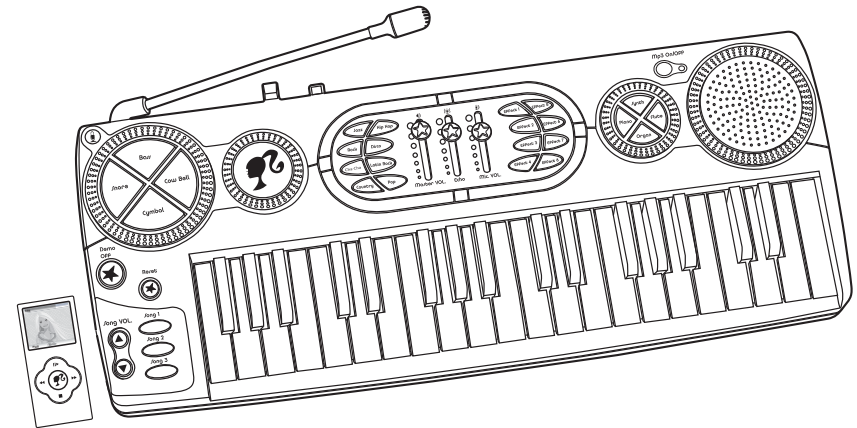

Important Message to Consumers

Thank you for purchasing one of Barbie™'s top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Barbie™ products are designed for.

Keep these instructions for future reference as they contain important information.

Getting Started

Battery Installation

ATTENTION: Batteries should only be installed by an adult.

 
1. Open the battery compartment door located on the back of the unit.
2. Install 4 "AA" (R6) size batteries, making sure that the + and - polarities match the diagram printed inside the battery compartment.
3. Close the battery compartment door and tighten the battery door screw. Do not over-tighten.

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging (if removable).
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be recharged under adult supervision (if removable).


Remove Demo Tab

The Barbie™ Guitar has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly.

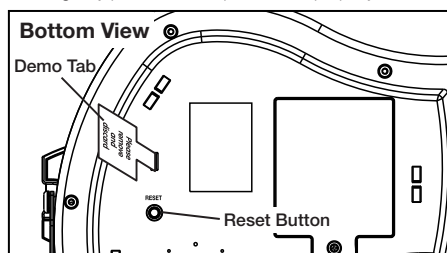

Carrying Strap Installation

 1. Attach the strap ends to the Guitar body.
2. Hang it onto your shoulder.
3. Adjust the strap length to fit you.

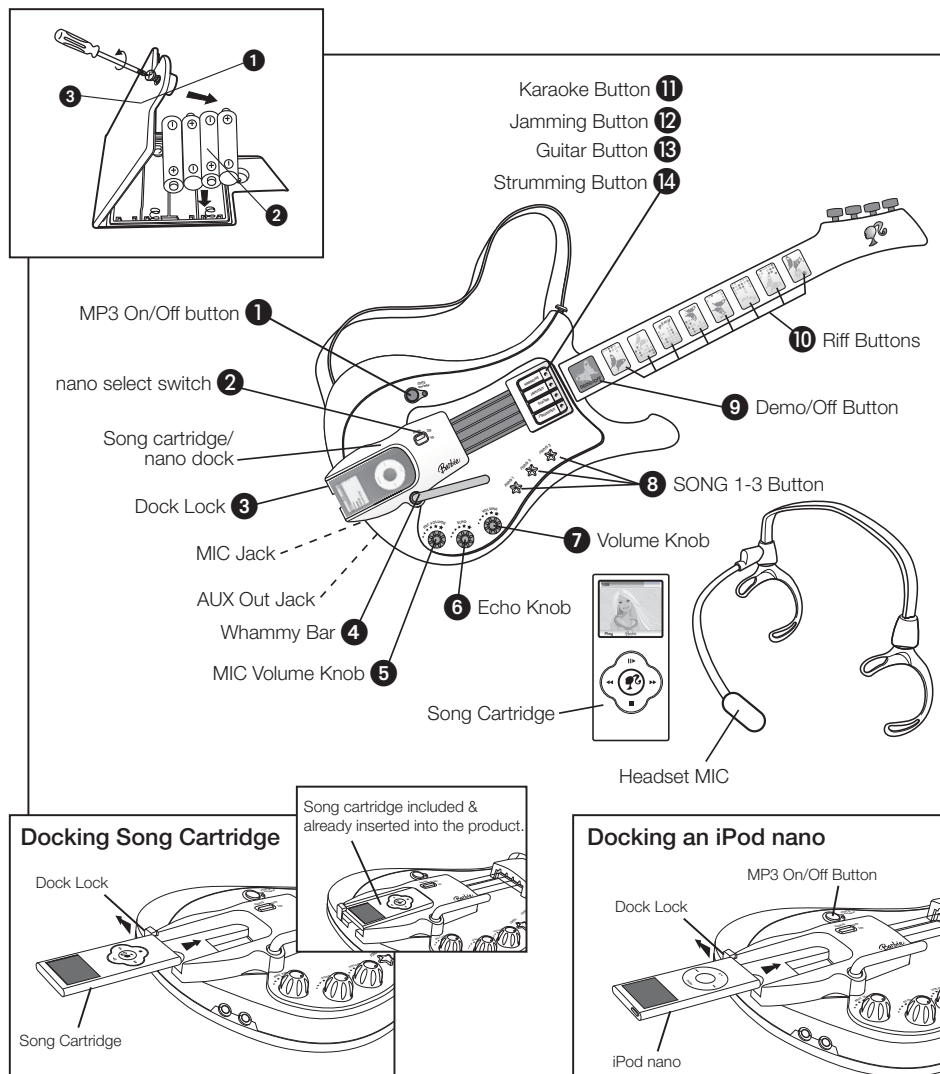

Docking Song Cartridges

Note: The Barbie™ Guitar comes with a song cartridge containing 3 songs already installed into the product.

1. Slide and hold the 3 Dock Lock located on the front of the dock near the rear strap post to the open position, then slide a song cartridge into the dock as shown. Please make sure the cartridge is plugged in properly. Release the lock switch to the closed position.
2. Press a Song Button to listen to a song.

Docking iPod nano

1. Turn on your iPod nano and select a song to play*
2. Move the 2 nano select switch on the guitar to match your nano model (1G or 2G). To avoid damage to the guitar or your nano, never dock a 1G nano when the switch is in 2G position, or vice versa.
3. Slide and hold the 3 Dock Lock located on the front of the dock near the rear strap post to the open position, then slide your iPod nano into the dock as shown. Please make sure the nano is plugged in properly. Release the 3 Dock Lock to the closed position.
4. Press play on your nano.
5. Press the 1 MP3 On/Off button to play your nano through the guitar for 10 minutes (the guitar will auto shut off after 10 minutes). Press again to keep playing nano.
6. Please remember to stop play and to power off your nano manually.

* **Note:** Follow your iPod nano user manual for details on operating your nano.

Using the AUX Out Jack with other audio devices

You can connect your Barbie™ Guitar to a line-level input jack on a computer, recording device or home amplifier using the AUX out jack.

1. Connect the Barbie™ Guitar AUX out jack to a recording device or home amplifier using an audio cable (not included).
2. AUX output sound level is volume independent, so please adjust your recording device/home amplifier for suitable sound level.

Playing with the Guitar

Demo Mode

1. Press the 9 Demo/Off button to learn about the guitar.

Karaoke Mode

1. Press the 11 Karaoke button to start karaoke mode, singing to a song cartridge.
2. Songs will start playing or you can press 8 SONG 1-3 buttons to select a desired song.
3. Sing into the headset MIC. You can turn the 6 Echo Knob to adjust the echo effect. Adjust 5 MIC volume.
4. You can also play the guitar strings to get guitar sounds.
5. Press the 10 Riff Buttons or 4 Whammy Bar to get fun sound effects.